



## How to make IDP3.1 Flex version USB bootable disk


1. Flex image need to apply from Intel website. Please reference below manual.  
<http://www.intel.pl/content/dam/www/public/us/en/documents/guides/iot-platform-marketplace-guide.pdf>
2. Prepare a 4GB USB disk
3. Download 3<sup>rd</sup> utility “Win32DiskImager” and install it  
<https://sourceforge.net/projects/win32diskimager/>
4. Plug USB and Open Win32DiskImager  
Click red part to select image

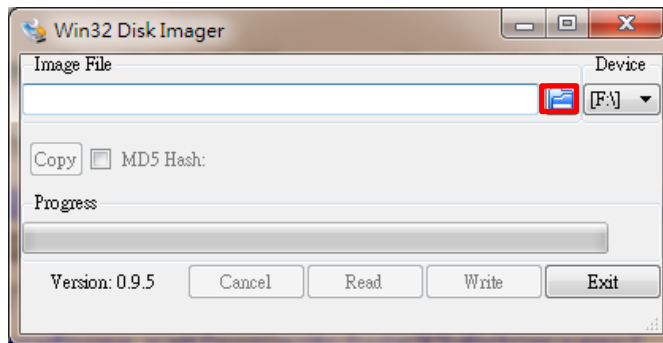

5. Select intel atom image “IntelloTGatewaySoftwareSuite\_atom64bit.img”

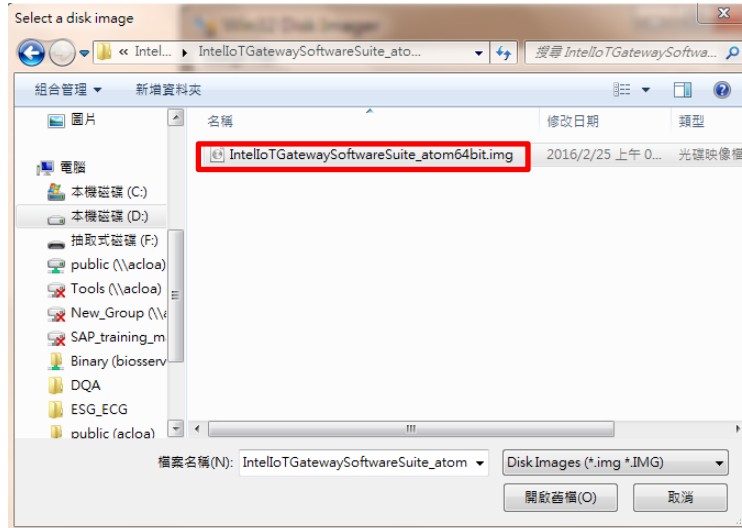

6. Click “Write”

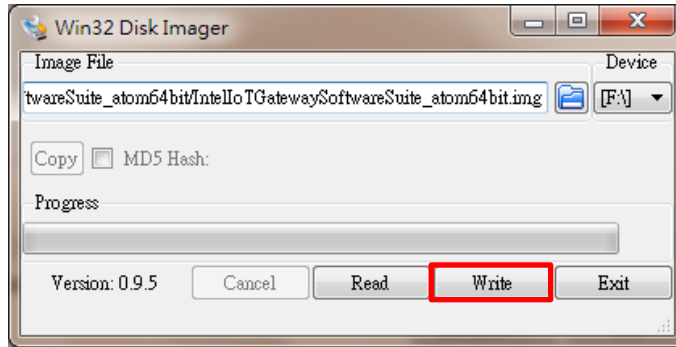

## Installing the IDP 3.1 Flex image to UTX-3115 Hard Disk

1. Insert the USB Flash Drive into the UTX-3115
2. Boot into to BIOS menu
3. Change USB flash drive be the first boot priority, save and exit.  
BIOS Menu -> Boot -> Hard Drive BBS Priorities -> 1.USB Flash Drive
4. System should boot up using the USB Flash Drive.
5. Login account: root / Login password: root
6. From the UTX-3115, install the IDP XT from the USB flash drive to the UTX-3115 hard disk drive, using the command:

```
/sbin/deploytool -d /dev/sda --reset-media -F
```

Say “yes” when asked to “Restore the boot media to its factory defaults.” This process will take several minutes.

7. When copy has finished, shutdown by entering the command: halt
8. Wait until the Power button light turns off.
9. Remove the USB key.
10. Press the Power button to power-on the board from the Hard Disk Drive.
11. When the system has booted, login as user: root password: root.
12. The UTX-3115 is ready to use.